

### What are suspension centres and axle spread?

Axle spread is the distance between each of the axles when mounted in a suspension.

Suspension centres is the distance between the suspension hangers when mounted to the axle.

